

# Installation Instructions


## Frankly Plus Floodlight

|                            |                                  |
|----------------------------|----------------------------------|
| Input                      | 120-240V AC 50/60Hz              |
| Power                      | 30/50/75/100/150/200/240/300W    |
| Operating Temp             | -30°C—+45°C STD, -20°C— +45°C DD |
| Connection Type            | Flying Lead                      |
| Emergency Option           | 430964 & 430978                  |
| Control Connection         | N/A                              |
| Light Source Energy Rating | A                                |



### Dimensions:

| Part No. | Description       | L (mm) | W (mm) | D (mm) | Weight (kg) | EPA (m²) |
|----------|-------------------|--------|--------|--------|-------------|----------|
| 430973   | Frankly Plus 30W  | 344    | 269    | 65     | 1.97        | 0.07     |
| 430974   | Frankly Plus 50W  | 344    | 269    | 65     | 1.97        | 0.07     |
| 430975   | Frankly Plus 75W  | 390    | 317    | 65     | 3.2         | 0.095    |
| 430976   | Frankly Plus 100W | 390    | 317    | 65     | 3.2         | 0.095    |
| 430977   | Frankly Plus 150W | 419    | 349    | 65     | 3.8         | 0.117    |
| 430978   | Frankly Plus 150W | 419    | 349    | 65     | 3.8         | 0.117    |
| 430979   | Frankly Plus 200W | 459    | 387    | 65     | 4.7         | 0.141    |
| 430980   | Frankly Plus 240W | 499    | 441    | 70     | 5.82        | 0.183    |
| 430981   | Frankly Plus 300W | 499    | 441    | 70     | 5.9         | 0.183    |

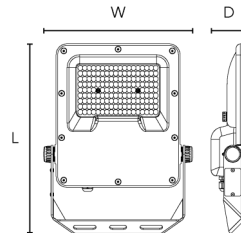


### Box Contents:

- Frankly Plus

### Tools Required For Installation:

- Wire Strippers /Cutters
- Hex Key (8mm for 30W-50W  
10mm for 75W-300W)

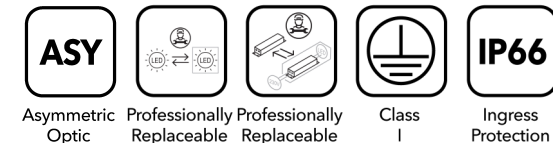

Scan for more  
Information.



**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION  
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

### Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase\*\*. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or if the product has been altered or tampered with in any way. Please see website for terms and conditions.



**WARNING: Risk of electric shock!**  
**Isolate the mains power before proceeding.**

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

**Wiring instructions for units equipped with EMERGENCY function:**


Emergency lighting luminaire must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.


**Installation Procedure:**

1. Attach Light fitting to desired location.
2. Adjust the fitting angle using Hex key.
3. Angle luminaire to desired position (allowed operating positions shown) and retighten.
4. Do not face luminaire directly upwards.
5. Connect mains cable as per image, using suitable IP rated junction box and connector such as Wago 222.
6. Reconnect the mains supply.


1.

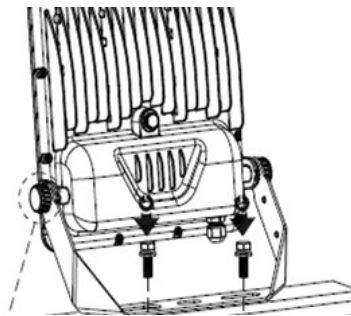


2.

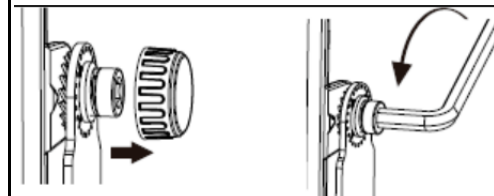

3.

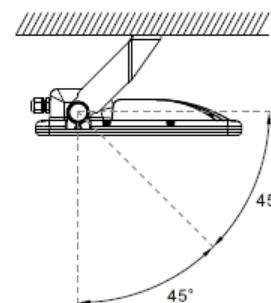


4.

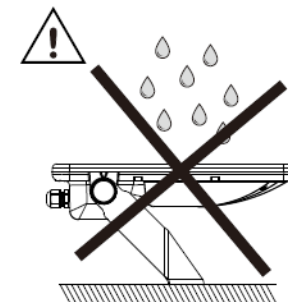

5.



6.

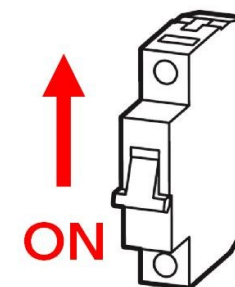

7.

8.