


Dimensions:

Part No.	Description	A	B	C	Weight	Hole Cut Out
430206	Eyebrook 4" Downlight 13W 4000K	78	120	145	0.5Kg	130mm
430207	Eyebrook 6" Downlight 18W 4000K	90	145	172	0.75Kg	155mm
430208	Eyebrook 6" Downlight 25W 4000K	90	145	172	0.75Kg	155mm
430209	Eyebrook 6" Downlight 35W 4000K	90	145	172	0.75Kg	155mm

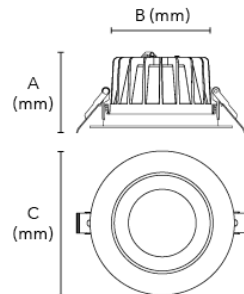

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.
 Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions


Eyebrook Lens Downlight

Input	220–240V AC 50/60Hz
Power	13W/18W/25W/35W
Operating Temp	-20°C–+45°C
Connection Type	Flying Lead
Emergency Option	430971 (Sold Separately)
Control Connection	N/A
Light Source Energy Rating	E/F



Box Contents:

- Light Fitting
- Instruction Manual

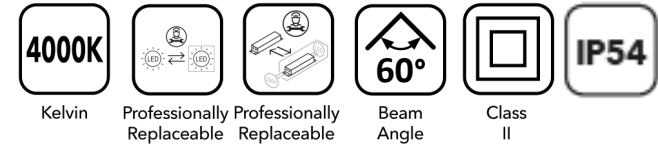

Tools Required For Installation:

- Hole Saw
- Screwdriver



READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!

Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Installation Procedure:

1. Cut your required size mounting hole. (See reverse)
2. Wire as per diagram ensuring a suitable connection method and/or junction box is used, then reconnect mains supply
3. Connect the LED driver to the downlight using the Twist-N-Lock jack connector
4. Fit the downlight into desired location lifting the fixing levers before installation
5. Re-connect the mains supply

1.




2.




Brown – Live

Blue – Neutral

3.

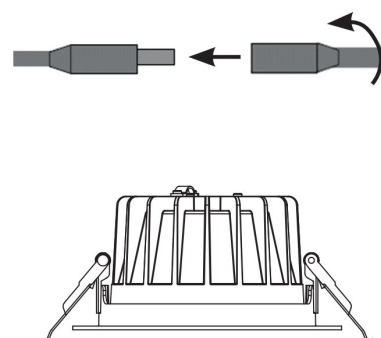

4.

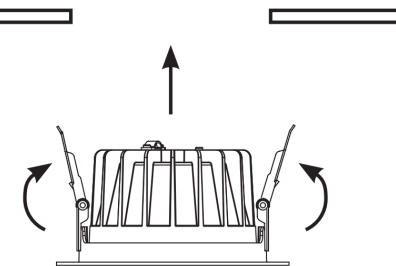

5.

