


Dimensions:

Part No.	Description	A	B	C	Weight	Hole Cut Out
430203	Eyebrook 4" Downlight 12W 3CCT	78	120	145	0.5Kg	130mm
430204	Eyebrook 6" Downlight 16W 3CCT	90	145	172	0.75Kg	155mm
430205	Eyebrook 6" Downlight 22W 3CCT	90	145	172	0.75Kg	155mm

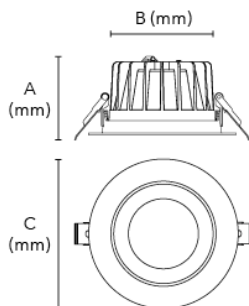

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.
Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions

Eyebrook Dome Downlight

Input	220–240V AC 50/60Hz
Power	12W/16W/22W
Operating Temp	-20°C–+45°C
Connection Type	Flying Lead
Emergency Option	430971 (Sold Separately)
Control Connection	N/A
Light Source Energy Rating	F



Box Contents:

- Light Fitting
- Instruction Manual



3CCT



Professionally Replaceable



Professionally Replaceable



Beam Angle



Class II



IP54

Tools Required For Installation:

- Hole Saw
- Screwdriver



Scan for more Information.



READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!

Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Installation Procedure:

1. Cut your required size mounting hole. (See reverse)
2. Wire as per diagram ensuring a suitable connection method and/or junction box is used, then reconnect mains supply
3. Connect the LED driver to the downlight using the Twist-N-Lock jack connector
4. Select the desired Colour temperature using the switch
5. Fit the downlight into desired location lifting the fixing levers before installation.
6. Re-connect the mains supply

