


Dimensions:

Part No.	Description	Length (mm)	Width (mm)	Height (mm)	Weight (kg)
430402-PIR	Sutton Plus Batten 4ft Single	1220	64	64	1.25
430403-PIR	Sutton Plus Batten 4ft Twin	1220	64	64	1.25
430395-PIR	Sutton Plus Batten 5ft Single	1524	64	64	1.55
430396-PIR	Sutton Plus Batten 5ft Twin	1524	64	64	1.55
430397-PIR	Sutton Plus Batten 6ft Single	1829	64	64	1.80
430398-PIR	Sutton Plus Batten 6ft Twin	1829	64	64	1.80

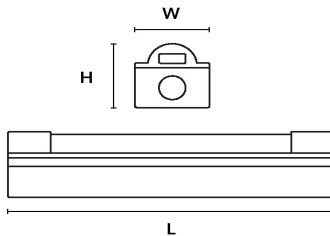

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.
Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS – All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions



Sutton Plus PIR Batten Plug & Play

Input	220-240V AC 50/60Hz
Power	19/27/38/50/60W
Operating Temp	0 - 40°C
Connection Type	Push-Fit Terminal
Emergency Option	-H3 (Sold Separately)
Control Connection	N/A
Light Source Energy Rating	C




Box Contents:


- Sutton Plus Batten
- Surface Mounting Kit



Beam
Angle



Professionally
Replaceable



Professionally
Replaceable



BESA
Mount



Class
I



Ingress
Protection

Tools Required For Installation:

- Wire Strippers / Cutter
- Drill



Scan for more
Information.



**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installer's responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Wiring instructions for units equipped with EMERGENCY function:

Emergency lighting luminaire must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.

Installation Procedure:

1. Make sure mains power is off and safe isolation procedures are followed. Secure the supplied wall plugs to the surface where you require to mount the fitting.
2. Separate the body from the diffuser.
3. Secure the base of the fitting to the wall or ceiling.
4. Feed the cable through the entry point and wire into the terminal block - Standard Version.
5. Feed the cable through the entry point and wire into the terminal block - Emergency Version.
6. Select the PIR Sensor dip-switches (as per table below) & colour temperature to your desired settings.
7. Re-fit the diffuser & screw in the remaining retaining screws.
8. Reconnect the mains supply.

PIR SENSOR DIP SWITCH SETTINGS

