


Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
431255	Harlock Court Floodlight 200W/300W/400W 3000K Grey Asymmetric Optic	580	400	80	7.5Kg
431256	Harlock Court Floodlight 200W/300W/400W 4000K Grey Asymmetric Optic	580	400	80	7.5Kg
431257	Harlock Court Floodlight 200W/300W/400W 5000K Grey Asymmetric Optic	580	400	80	7.5Kg
431258	Harlock Court Floodlight 400W/500W/600W 3000K Grey Asymmetric Optic	780	500	80	13Kg
431259	Harlock Court Floodlight 400W/500W/600W 4000K Grey Asymmetric Optic	780	500	80	13Kg
431260	Harlock Court Floodlight 400W/500W/600W 5000K Grey Asymmetric Optic	780	500	80	13Kg
431261	Harlock Court Floodlight 600W/700W/800W 3000K Grey Asymmetric Optic	812	635	85	20Kg
431262	Harlock Court Floodlight 600W/700W/800W 4000K Grey Asymmetric Optic	812	635	85	20Kg
431263	Harlock Court Floodlight 600W/700W/800W 5000K Grey Asymmetric Optic	812	635	85	20Kg

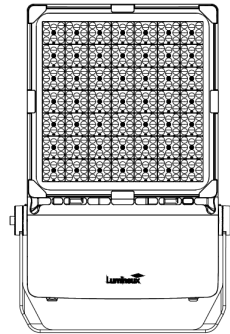

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.
 Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions




Harlock Court Floodlight

Input	220 ~ 240V AC 50/60Hz
Power	200/300/400W, 400/500/600W, 600/700/800W
Operating Temp	-30 ~ +50°C
Connection Type	1M Flying Lead
Shield Options	200/300/400W-431267, 400/500/600W- 431268, 600/700/800W- 431269
Light Source Energy Rating	F




Box Contents:

- Harlock Light Fitting



Professionally
Replaceable



Professionally
Replaceable



Product
Warranty



Class
I



Ingress
Protection

Tools Required For Installation:

- 10mm Hex Key
- Philips Screwdriver
- Drill
- Slotted Screwdriver



**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
 KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The backup battery pack in the emergency version is warranted for a period of 5 Years. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!
Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected


Wiring instructions for units equipped with EMERGENCY function:

Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.

Installation Procedure:


1. Disconnect mains supply.
2. Drill holes for required fitting and fix bracket.
3. Secure using suitable fixing method.
4. Loosen M12 hexagon head screw
5. Tilt fitting to correct angle, tighten screws (Torque value 94Nm).
6. Choose required wattage & colour temperature.
7. Connect the incoming supply using a suitable terminal and junction box as required (Recommended WAGO 222).
8. Reconnect mains supply.

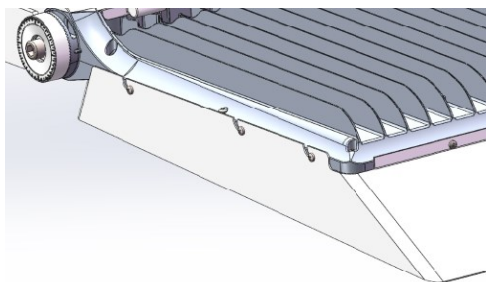


Shield Installation Procedure:

1. Loosen screws, Align and attached Shield and re-tighten screw's.


1.

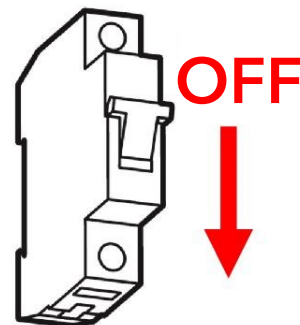


2.

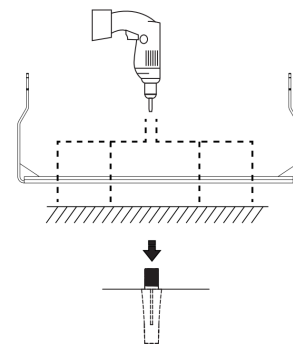


3.

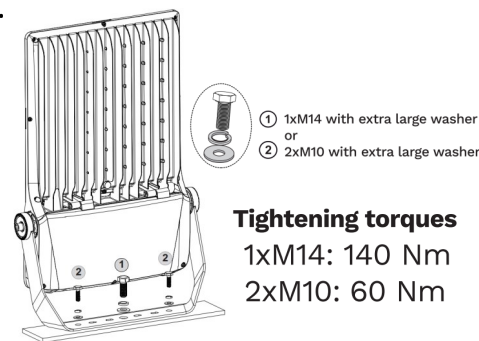


4.

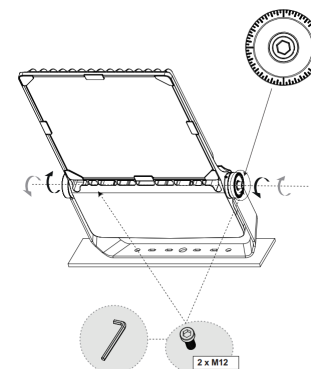

5.

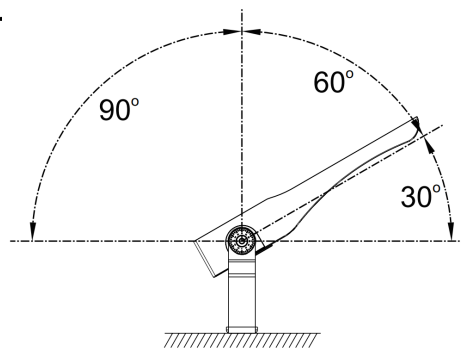

6.

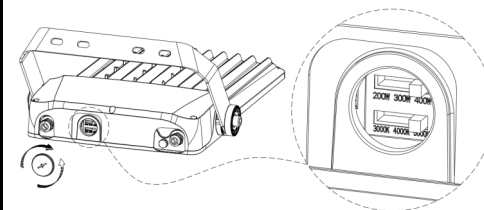

7.

Electrical connection wiring

- LIVE (L) = Brown
- Earth (⊕) = Yellow/Green
- NEUTRAL (N) = Blue

8.

